




DBS Conversion

from RAM-400339 Board
set to the New RAM-400339-AF
Board Set

WI0110 Rev. 0
October 8, 2004

presented by



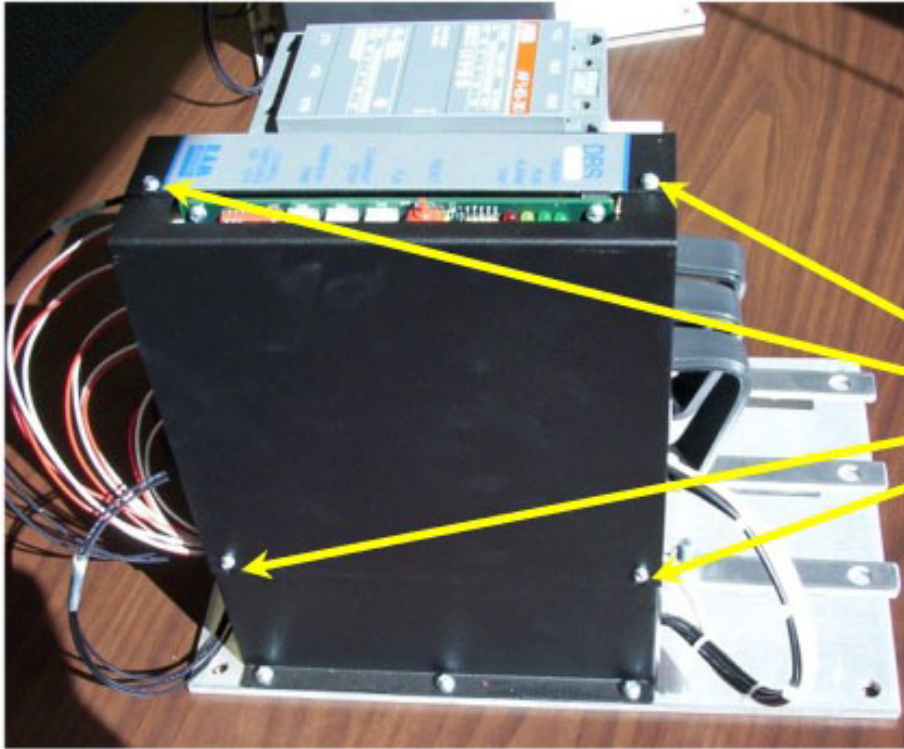

Step #1

- Remove all sources of power from the unit.

Step #2

- Remove four screws and remove side cover

Step #3


- Remove two mounting screws

Step #4

- Unplug connectors

Step #5

- Install new board set
- Re-install connectors

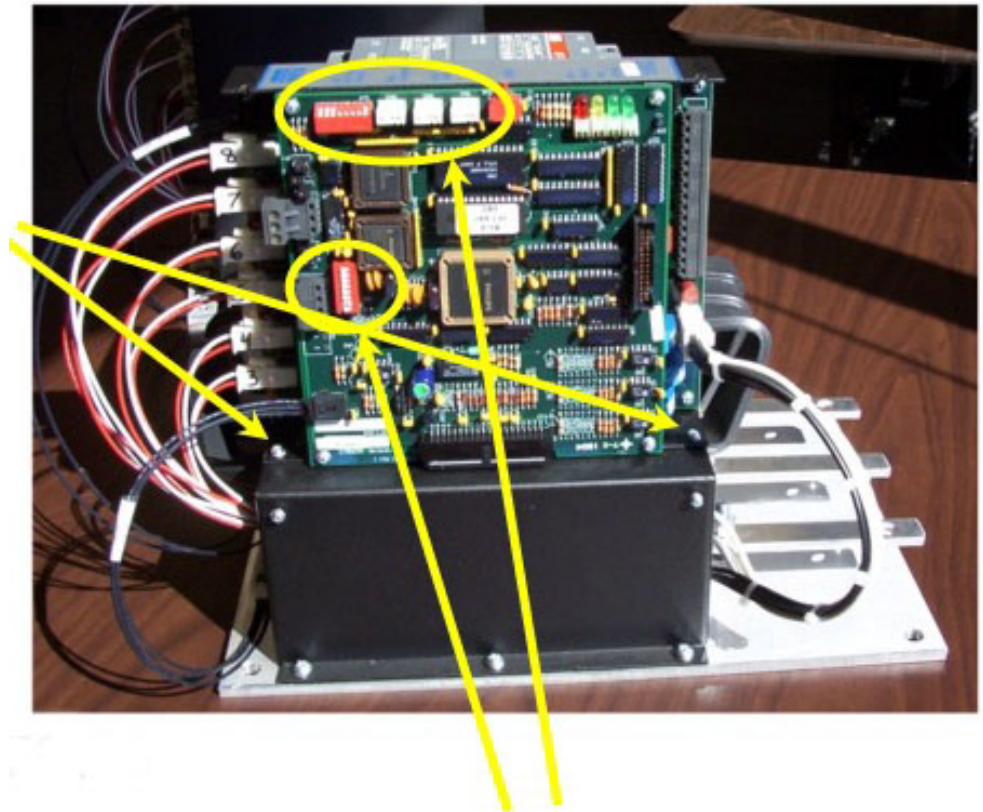


Step #6

Verify rotary switches and dip switches are set in the same position as the old boards


Step #7


- Cut off old P-9 CT connector.
- Strip wire and connect into new TB2 connector.
- Follow the wire numbers in the photo for the correct sequence.

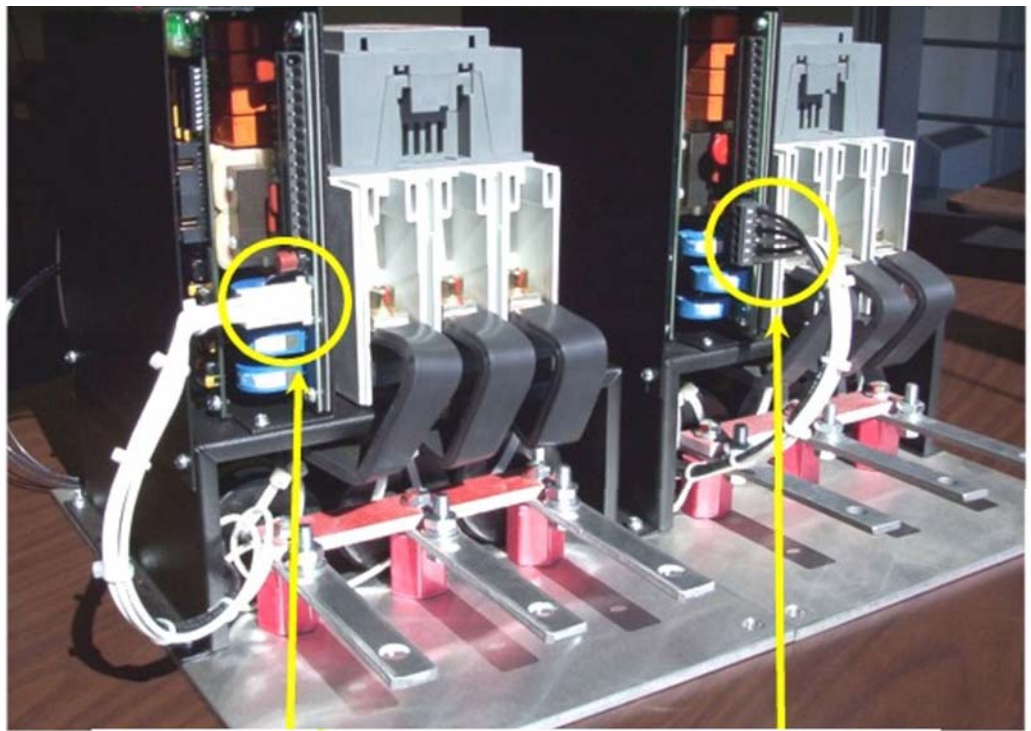

Old Style P-9
Connector

New Style
TB2 Connector
RAM Part #TB-0206

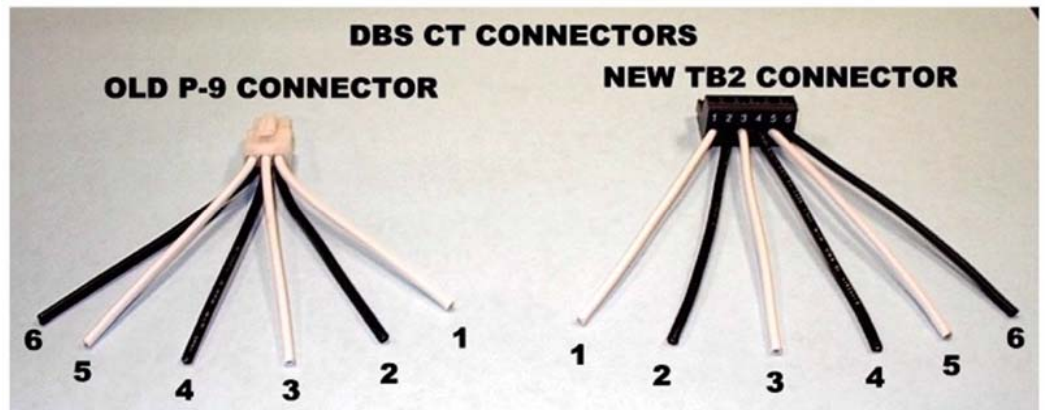

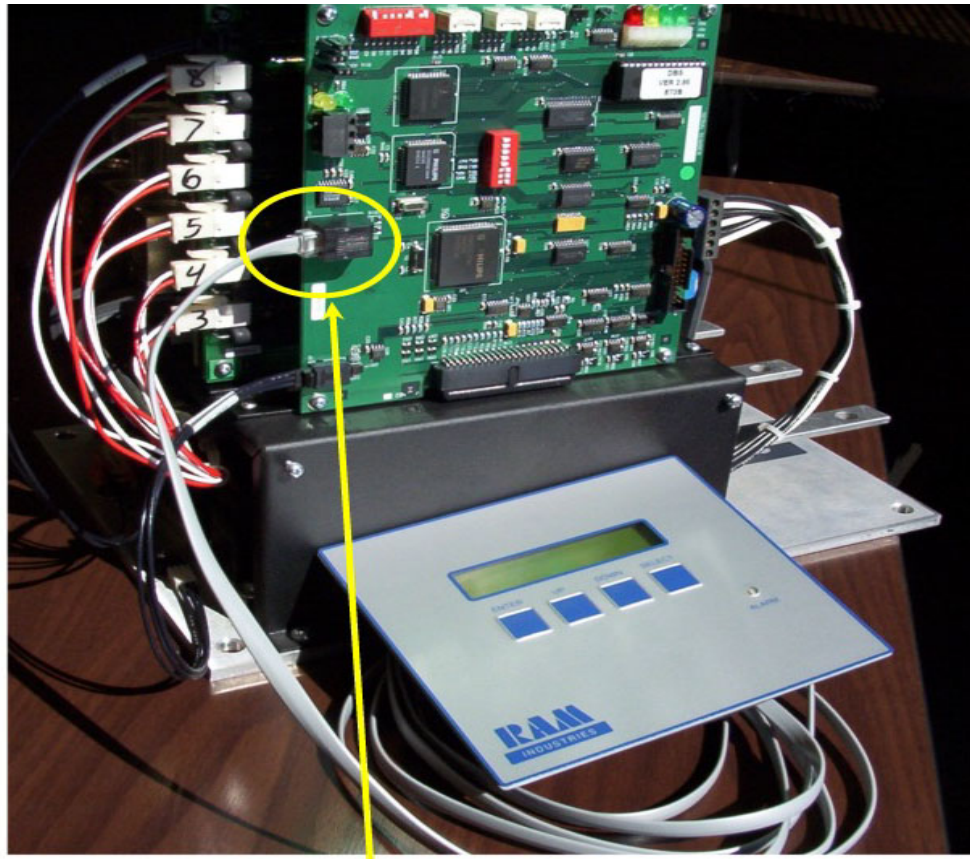

Step #8

- Install new display cable with RJ 45 connectors
- RAM Part # WC-0040

Step #9

- Re-install side cover